OPUS CS 2205

PL **Instrukcja obsługi**

1 ZASADY BEZPIECZEŃSTWA

- Przed rozpoczęciem pracy z urządzeniem, należy zapoznać się z zasadami bezpieczeństwa, zaleceniami producenta i instrukcją obsługi. Instrukcję należy zachować i korzystać z niej w przypadku jakichkolwiek wątpliwości dotyczących obsługi urządzenia.
- Nie wolno używać urządzenia do innych celów niż określone w instrukcji obsługi.
- Urządzenie należy ustawić na stabilnym podłożu w pobliżu gniazdka o napięciu 220 – 240 V, 50 – 60 Hz.
- Urządzenie należy chronić przed wilgocią i kurzem.
- Nie wolno ustawiać urządzenia w pobliżu urządzeń grzejnych lub wentylacyjnych.
- Nie wolno używać urządzenia w pobliżu łatwopalnych gazów lub cieczy.
- Należy chronić przewód zasilający urządzenie przed uszkodzeniem, nie używać przewodu do przenoszenia urządzenia i wyciągania wtyczki z gniazdka.
- Urządzenie należy całkowicie wyłączyć z sieci w razie konieczności zdjęcia głowicy z kosza na przykład przy jego opróżnianiu lub gdy urządzenie jest przenoszone.
- Urządzenie należy trzymać poza zasięgiem dzieci i zwierząt.
- **UWAGA! Urządzenie zawiera elementy obrotowe, które mogą spowodować wciągnięcie luźnych elementów garderoby, włosów itp.**
- Należy zachować szczególną ostrożność sięgając w obszar szczeliny podawczej.
- W przypadku przegrzania urządzenia należy natychmiast wyłączyć niszczarkę z prądu.
- Nie wolno kłaść ciężkich przedmiotów na niszczarkę!
- Należy kontrolować sprawność urządzenia. W przypadku zauważenia jakichkolwiek nieprawidłowości w pracy, należy skontaktować się z serwisem.
- Urządzenie jest przeznaczone wyłącznie do pracy w pomieszczeniach zamkniętych, w temperaturze powyżej 8°C.
- Urządzenie należy obsługiwać zawsze zgodnie z ogólnymi zasadami BHP.
- Wszelkich napraw urządzenia może dokonywać jedynie osoba uprawniona.
- Po zakończeniu pracy należy wyłączyć urządzenie przełącznikiem głównym ustawiając go w pozycji OFF lub wyłączyć z sieci, należy pamiętać, że całkowite wyłączenie urządzenia następuje po wyciągnięciu wtyczki z gniazda sieciowego
- Nie wolno używać w pobliżu niszczarki aerozoli, olei czy smarów na bazie ropy naftowej lub innych palnych substancji.
- Nie wolno używać sprężonego powietrza w aerozolu do czyszczenia niszczarki.

2 ZALECENIA PRODUCENTA

- Niszczarka służy do niszczenia papieru. Nie wolno używać urządzenia do niszczenia innych materiałów.
- Wyłącznik niszczarki powinien znajdować się w pozycji „0" w przypadku, gdy urządzenie nie jest używane przez dłuższy czas.
- Należy pamiętać o opróżnianiu kosza na ścinki.
- Niszczarka może pracować tylko z koszem będącym w zestawie.
- W celu zapewnienia długiego okresu użytkowania i niezawodnego funkcjonowania nie należy niszczyć jednorazowo więcej niż 5 kartek papieru (80g/m²).
  Nie wolno niszczyć miękkiej folii PCV, papieru nabłyszczanego, składanki komputerowej ani kartonu – może to doprowadzić do uszkodzenia mechanizmu tnącego.

UWAGA!
Niestosowanie się do powyższych zaleceń może doprowadzić do utraty gwarancji!

3 BUDOWA URZĄDZENIA

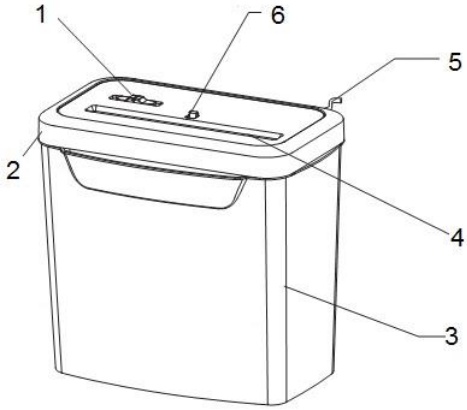

1 – Trójpozycyjny przełącznik REV/OFF/AUTO
2 – Głowica tnąca
3 – Kosz na ścinki
4 – Szczelina na papier
5 – Przewód zasilający
6 – Przycisk trybu czyszczenia noży tnących

4 OBSŁUGA NISZCZARKI

- Urządzenie należy ustawić na stabilnej i równej powierzchni.
- Na kosz nałóż głowicę tnącą.
- Podłącz urządzenie do sieci i ustaw przełącznik w pozycji AUTO.
- Włóż papier do szczeliny podawczej. UWAGA! Papier należy wprowadzać w środek szczeliny, po wprowadzeniu papieru niszczarka automatycznie rozpoczyna pracę. Maksymalna szerokość papieru to 220mm, jeśli kartki, które chcemy zniszczyć są szersze, należy je przyciąć lub złożyć do odpowiedniego rozmiaru. Jednorazowo można niszczyć do 5 kartek papieru 80g/m².
- Po 2 minutach pracy ciągłej silnik urządzenia może ulec przegrzaniu, a urządzenie automatycznie zakończy pracę. Odczekaj 40 minut by silnik się schłodził.
- W przypadku zacięcia papieru wciśnij przycisk „REV" aby wyciągnąć zacięty papier. Następnie wciśnij przycisk czyszczenia noży tnących (6) aby usunąć resztki papieru pozostawione na nożach tnących.
- Jeżeli nie rozwiąże to problemu, należy wyłączyć urządzenie z zasilania i skontaktować się z punktem serwisowym.

5 CZYSZCZENIE

- Przed przystąpieniem do czyszczenia niszczarki należy upewnić się, że wtyczka jest wyciągnięta z gniazda zasilającego.
- Kiedy kosz jest zapełniony ścinkami, należy zdjąć z niego głowicę niszczarki i opróżnić go. Należy regularnie opróżniać kosz na ścinki.

• Czyszczenie obudowy – zabrudzoną obudowę należy przetrzeć miękką ściereczką nasączoną wodą lub delikatnym detergentem. Nie wolno zanurzać urządzenia w wodzie. Nie używać benzenu, alkoholu, rozpuszczalnika do farb czy benzyny – użycie tych środków może spowodować trwałe zniszczenie obudowy.

6 KONSERWACJA

• Przed przystąpieniem do konserwacji niszczarki należy odłączyć urządzenie od prądu!
• Regularne oliwienie noży tnących zapobiega zmniejszeniu wydajności, podwyższeniu głośności oraz znacznie wydłuża sprawność niszczarki.
• Noże tnące powinno się smarować specjalnym olejem (znajdującym się w ofercie OPUS), po kilkukrotnym opróżnieniu kosza (worka) na ścinki. Wystarczy kilka kartek papieru zwilżyć olejem, a następnie poddać je zniszczeniu w taki sposób aby olej został rozprowadzony na całej powierzchni noży tnących.

7 MOŻLIWE NIEPRAWIDŁOWOŚCI DZIAŁANIA

Niesprawność	Przyczyna	Środek zaradczy
Po włożeniu papieru do szczeliny niszczarka nie rozpoczyna pracy.	1. Niszczarka nie jest prawidłowo podłączona do sieci. 2. Kartki przeznaczone do niszczenia są zbyt cienkie. 3. Przegrzanie silnika. 4. Zacięcie papieru. 5. Niszczarka nie jest prawidłowo nałożona na kosz.	1. Podłącz urządzenie do sieci w prawidłowy sposób. 2. Złóż kartkę lub włóż więcej papieru i ponownie włóż do szczeliny. 3. Wyłącz niszczarkę, odczekaj 40 minut i ponownie włączyć urządzenie. 4. Usunąć zacięty papier ze szczeliny. 5. Nałóż prawidłowo niszczarkę na kosz.
Urządzenie nie przestaje pracować po zakończeniu niszczenia.	1. Czujnik w szczelinie podawczej jest pokryty resztkami papieru.	Odłącz urządzenie od zasilania i usuń ze szczeliny podawczej nagromadzony papier.
Niszczarka pracuje zbyt głośno.	Niszczarka jest ustawiona na nierównej powierzchni.	Ustaw urządzenie na stabilnej i równej powierzchni.
Niszczarka pracuje nieprawidłowo.	1. Zbyt dużo kartek zostało włożonych do szczeliny podawczej. 2. Papier ma większe wymiary od szczeliny podawczej. 3. Papier nie został włożony w środek szczeliny podawczej.	1. Zmniejsz ilość niszczonych jednorazowo kartek. 2. Wciśnij przycisk REV, aby wyciągnąć papier, a następnie włóż kartki ponownie do szczeliny. Jeśli kartki, które chcemy zniszczyć są szersze, należy je przyciąć lub złożyć do odpowiedniego rozmiaru. 3. Włóż papier w środek szczeliny podawczej.

8 DANE TECHNICZNE

Typ niszczarki: ..... cross-cut
Szerokość szczeliny podawczej: ..... 220 mm
Max ilość niszczonych kartek: 5*
Szerokość cięcia: ..... 4 x 40 mm
Pojemność kosza: ..... 11,8 l
Zasilanie: ..... 220 – 240 V, 50 –60 Hz
Prąd znamionowy: ..... 0,6 A
Waga netto: ..... 2,9 kg
Waga brutto: ..... 3,5 kg
Wymiary (W x S x G): ..... 310 x 296 x 190 mm
*papier 80 g/m²

Zużyty sprzęt oznakowany niniejszym symbolem nie może być umieszczany i usuwany łącznie z innymi odpadami, w tym odpadami komunalnymi. Obowiązkiem użytkownika jest przekazanie zużytego produktu do punktu zbiórki w celu recyklingu odpadów powstałych ze sprzętu elektrycznego i elektronicznego. Właściwa segregacja i selektywna zbiórka odpadów zużytego sprzętu zmniejsza negatywne oddziaływanie substancji niebezpiecznych, które mogą się w nim znajdować, na środowisko naturalne i zdrowie człowieka. W celu uzyskania bardziej szczegółowych informacji dotyczących utylizacji zużytego sprzętu prosimy skontaktować się z przedstawicielem władz lokalnych, dostawcą usług utylizacji odpadów lub punktem sprzedaży, gdzie nabyto produkt. Zapewniając prawidłową utylizację sprzętu pomagamy chronić środowisko naturalne.

OPUS CS 2205

GB **User guide**

1 HEALTH & SAFETY PRECAUTIONS

- Before operating the equipment please read the Health & Safety precautions, manufacturer's recommendations and the operation manual.
- The operation manual should be easily available at any time for the operator.
- The equipment should be installed on a sturdy level surface near a 220–240 V, 50/60 Hz AC correctly earth socket.

- The equipment:
    - Should be protected against dust and moisture.
    - Must not be placed near a heating or ventilation unit.
    - Should not be used in vicinity of inflammable liquids or gases.
    - Do not use compressed air from an aerosol for clearing the shredder.
    - The power supply cable must be protected against damage.
    - Must not be used to pull or move the equipment or to remove the plug from the socket.
    - During long standstill or moving the equipment and to ensure that it is turned off completely, remove the plug from the mains socket.
    - Do not put any heavy objects on the device!
    - Should be kept away and out of the reach from children and animals.
    - Must not be used for any other purposes, than those indicated in the instruction manual.
    - The equipment must not be located outside, should be operated in room temperature higher than +8C

Danger!
- The equipment contains electrically driven rollers. Ensure long hair, loose jewellery, ties and other loose clothing are kept away from the entry slot they could get entangled in the rollers.
- It is necessary to check and supervise, if the equipment is operated and used correctly, if there should be a malfunction, you must contact the dealer or service team.
- The equipment must not be located outside and should be operated in a room temperature higher than +8 °C.
- Before removing any covers from the equipment, remove the power plug from a mains socket.
- If the motor overheats, it will cut out without a single, turn off the main switch immediately and wait for it to cool down! When you turn on the shredder again if it has cooled down enough it will start automatically without reset.
- Using inappropriate lubricants such as petroleum based cleaning materials, can cause a fire hazard.
- Only authorized and qualified staff may carry out any repairs during the Guarantee/ Warranty period.
- The equipment must be operated in accordance with the general Health & Safety rules.
- Do not leave the equipment operating without an operator.
- After use turn the equipment off by the switch on unit, next remove the plug from a socket if not in regular use.

2 MANUFACTUR'S RECOMMENDATIONS

- The equipment was designed for shredding paper only.
- During longer none operation, the mains switch should be turned "OFF' and unplugged.
- Before shredding, you must remove paper clips and staples from the documents.
- Empty the shredded waste from the bin frequently.
- The shredder can only be used with the original paper waste bin supplied.
- To ensure a long and faultless use, do not shred more than 5 sheets of 80 gram/m² paper at one time.
- Do not shred computer continues printout paper, PVC foil, coated paper or cardboard as it can damage of cutting blades, mechanism and over load the electric motor.

WARNING!
The equipment contains rotary elements, keep lose clothing, long hair, ties, j ewellery away from the shredding slot!

WARNING!
The blades are very sharp.

WARNING!
Not compliance with the rules and recommendations above can void the Guarantee/Warranty

3 LAY OUT OF THE EQUIPMENT

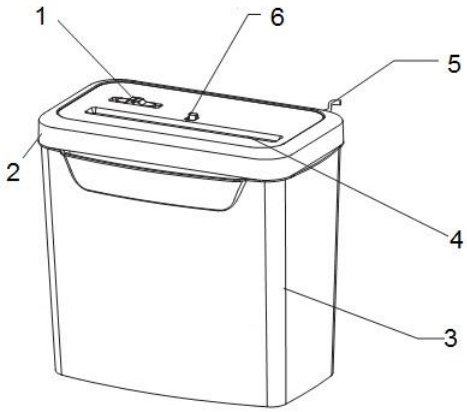

1 – REV/OFF/AUTO slider switch
2 – Cutting head
3 – Shredded paper waste bin
4 – Paper feed
5 – Power cord
6 – Clean shredding switch

4 OPERATION

- The equipment should be placed on a level floor.
- Install the shredding head unit on to the waste bin, ensure the head is fitted correctly there is a micro switch for safety.
- Before plugging in the equipment, ensure that power switch is in the OFF position.
- Plug in the equipment and move the slider switch to the AUTO position.
- Insert paper into the feed slot on the top. NOTE! All paper should be inserted centrally into the slot.
- The equipment will start automatically when you insert the paper.
- Maximum paper width 220 mm. If the pages are wider, cut or fold to fit the slot. You can only shred 5 sheets of 80 g/m² paper at a time.
- After 2 minutes of continues work the motor could overheat and stop working without a signal. Wait for about 30 minutes until it cools down, it will start without a reset just switch back on the shredder.
- Turn the power switch off when you have finished shredding.
- If too many pages are inserted into the slot, it will cause the cutting blades to jam with the paper inside.
- Slide the switch to (REV) to reverse the blades and pull out the paper slowly that is jammed/stuck inside, then switch to (FWD) then press the Clean shredding blades switch (6) to remove any paper scraps left in the cutting blades.
- If it will not solve the problem, contact the dealer or the service team.

5 CLEANING

- Before clearing the shredder ensure that the main power switch is switch off then unplug the equipment from the mains socket.
- When the shredded paper bin gets overfilled, it may cause problems and paper will go inside the mechanism feed and there is a risk of fire. Remove the cutting head unit form the waste bin and remove shreds and re-fit the shredder head unit to the waste bin.
- To avoid problems please clean the shred waste bin regularly before it overfills.
- Cleaning the housing, wipe the cover of the shredder with gentle home detergent or a damp cloth.
- Do not put the equipment into water.
- Do not wipe the unit with any petroleum based, thinners, alcohol or solvents they can cause permanent damage to the plastic housing and waste bin.

6 MAINTENANCE

- To prevent reduction of efficiency increased sound levels and to prolong the lifespan of the equipment, it is necessary to oil cutting blades regularly.
- After filling the waste bin several times, the blades should be oiled with special oil (provided by OPUS).
- Put a little oil on in lines across a few pieces of paper and shred them singly so that the oil will spread on the whole cutting mechanism.

7 POSSIBLE MALFUNCTIONS

Malfunction	Possible Cause	Remedy
Equipment does not start after inserting paper into the slot.	1. Not plug in properly. 2. Pages to be shred are too soft. 3. Overheated. 4. Paper jammed inside. 5. The waste bin is not fitted properly.	1. Not plug in properly. 2. Pages to be shred are too soft. 3. Overheated. 4. Paper jammed inside. 5. The waste bin is not fitted properly.
Equipment does not stop after shredding.	Paper sensor in the entry slot is covered by scraps of paper.	Unplug the shredder first then, clean the paper sensor next to the clear shredding blade switch.
The shredder operates too loud.	Equipment is not on a sturdy and level floor.	Place the machine on study and level floor.
The shredder does not operate correctly.	1. Too many pages inserted into the feed opening. 2. Too big a paper format. 3. Paper is not inserted in the centre of feed opening.	1. Reduce number of pages inserted to the slot at one time. 2. Switch to the REV button to remove paper and insert folded pages once again. 3. Insert paper in the centrally in the feed opening.

8 TECHNICAL DATA

Shredder type: ..... cross-cut
Feed opening: ..... 220 mm
Performance: 5*
Shred size: ..... 4 x 40 mm
Waste bin: ..... 11.8 Liters
Voltage: ..... 220 – 240 V AC 50 / 60 Hz
Input current: ..... 0.6 Amps
Net weight: ..... 2.9 kg
Gross weight: ..... 3.5 kg
Dimensions: ..... H 310 X W 296 X D 190 mm

*paper 80 g/m²

Equipment and products marked with this symbol cannot be deposed together with normal . or municipal waste. The user is required to take their used product to a collection point for recycling of waste electrical and electronic equipment. Proper segregation of used equipment reduces the negative impact of hazardous substances that may be in there, in to the environment which could impact, human and wild life health. For more detailed information concerning the disposal of used equipment, please contact your local authority, waste disposal service or the point of sale where you purchased the product. By ensuring proper disposal of equipment we are helping to protect the environment, humanity and wild life health.